

SPARE PARTS LIST - INSTACUT 3.5

LETTER	PART #	DESCRIPTION
A	071	Screw, Hex Head Stainless
B	2319	Black Rubber Foot, Screw On (sold individually)
C	379001	Base (includes Guide Rods)
D	379005	Pusher Head Casting (includes Bearings)
E	379007	Pusher Head Block, 3/8" Cut
	379008	Pusher Head Block, 1/4" & 1/2" Cut
F	379009	Bumper
G	379015	Suction Foot
H	379031	Guide Rod, 3/8" Diameter
I	379034	Thumbscrew, 1/4-20 x .875" (before 8/2008)
	2014004	Thumbscrew, 1/4-20 x 1.0" (after 8/2008)
J	379038	Pusher Head for 4-8 Section Wedger
	379039	Pusher Head for 6-12 Section Wedger
	379040	Pusher Head for 5-10 Section Wedger
	379041	Pusher Head for 4-8 Section Corer
	379061	Pusher Head for 6-12 Section Corer

LETTER	PART #	DESCRIPTION
K	353	Lock Nut 5/16" x 18 UNC
L	379034	Thumbscrew, 1/4-20 x .875" (before 8/2008)
	371090	Thumbscrew, 1/4-20 x .750" (after 8/2008)
M	15065	Blade, 4 Section Wedge
	15067	Blade, 6 Section Wedge
	15068	Blade, 8 Section Wedge
	15069	Blade, 10 Section Wedge
	15070	Blade, 12 Section Wedge
	15071	Blade, 6 Section Corer
	15072	Blade, 8 Section Corer
N	15062	1/4" Dice
	15063	3/8" Dice
	15064	1/2" Dice
	15086	1/4" & 1/2" Dice

