


KitchenAid®

**8 QT. STAND MIXER
COMMERCIAL - BOWL LIFT**

MODELS:

KSM8990WH0 (White)
KSM8990NP0 (Nickel Pearl)
KSM8990OB0 (Onyx Black)
KSM8990ER0 (Empire Red)
KSM8990DP0 (Dark Pewter)
KSM8990ES0 (Espresso)
KSM8990SL0 (Silver)


COLOR VARIATION PARTS

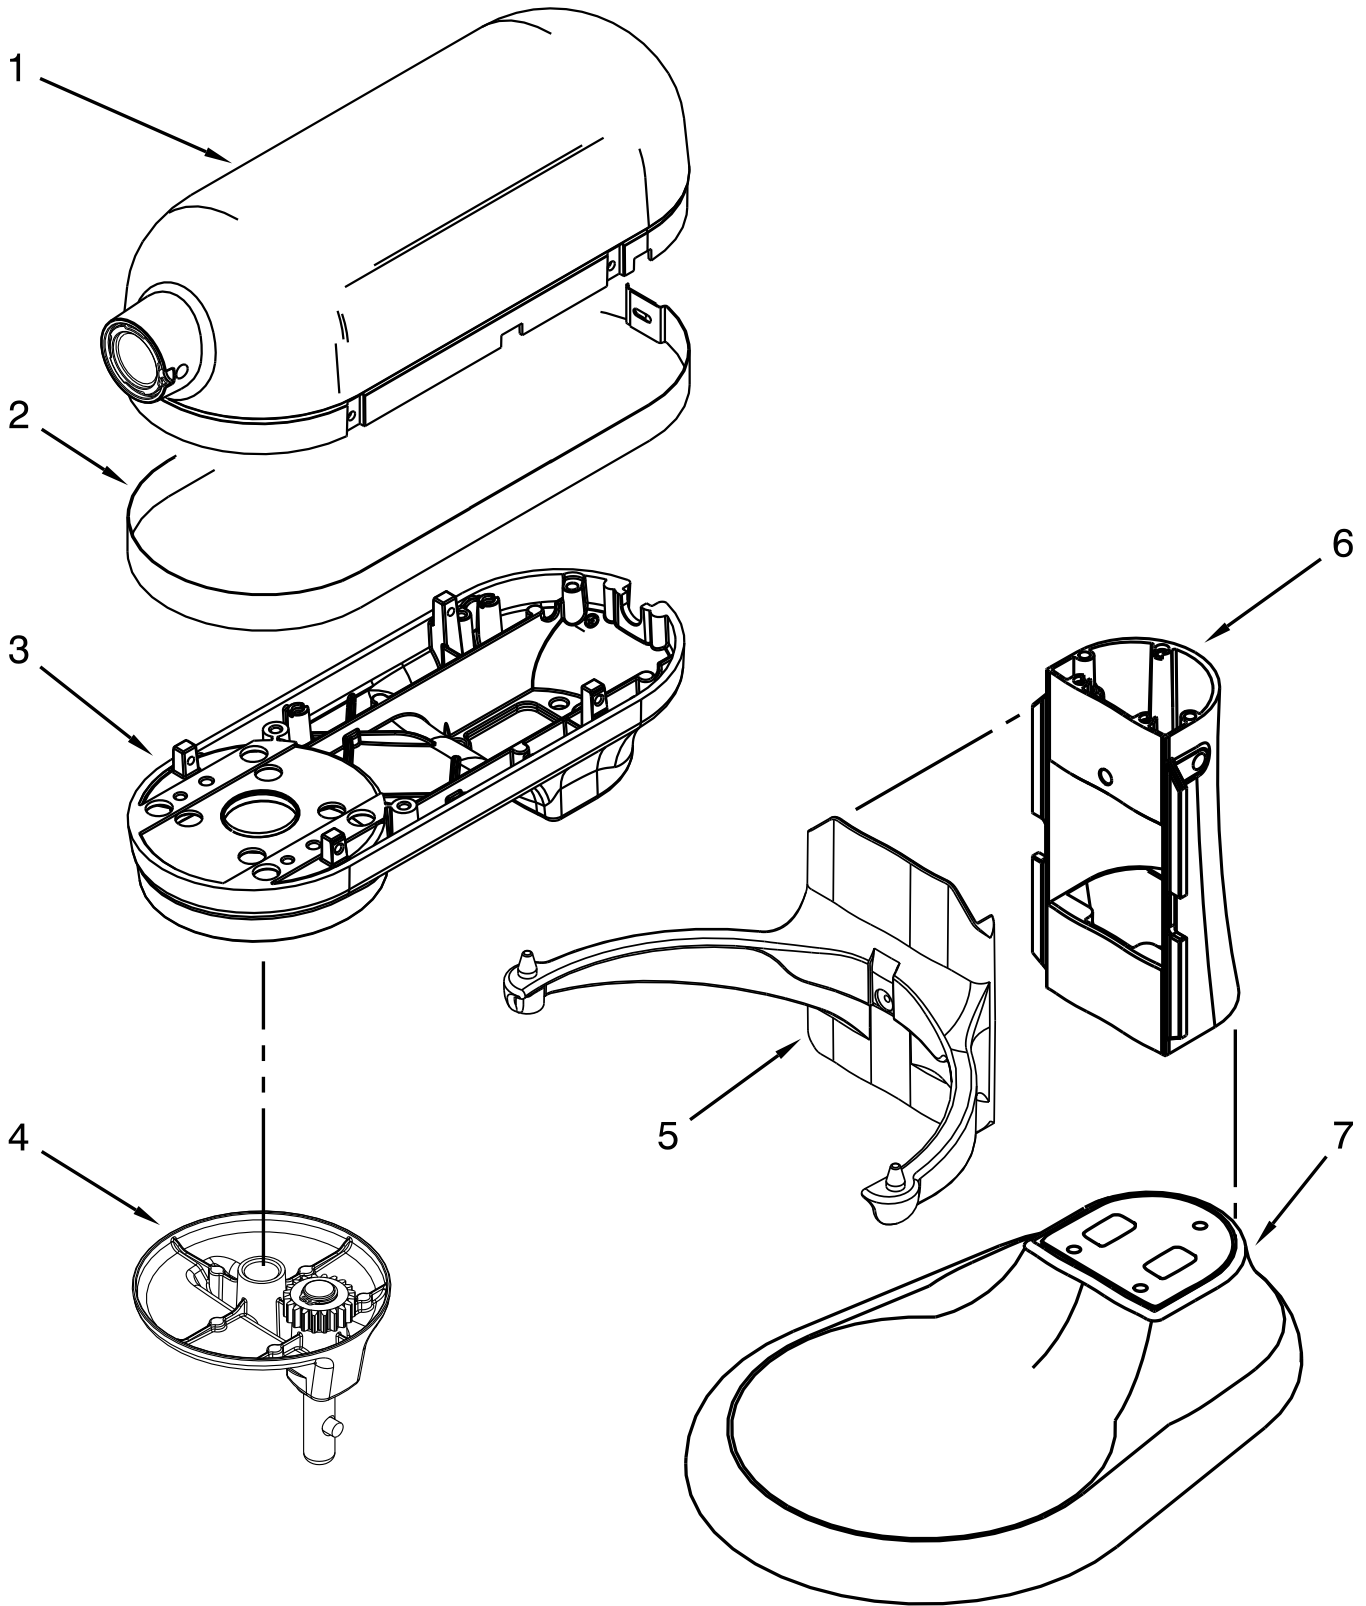

COLOR VARIATION PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u> <u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u> <u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u> <u>Description</u>
1	Motor Housing 9703311 White 9708749 Nickel Pearl 9705296 Onyx Black 9705300 Empire Red 9708711 Dark Pewter/Slate	4	Planetary W10540185 Chrome	7	Base & Foot Assembly 9703690 White
	W10453625 Espresso 9709571 Silver	5	Bowl Support and Pins 9703674 White 9708760 Nickel Pearl 9705356 Onyx Black 9705360 Empire Red 9708722 Dark Pewter/Slate		9708766 Nickel Pearl 9705344 Onyx Black 9705348 Empire Red 9708728 Dark Pewter/Slate
2	Trim Band W10540366 Dark Platinum		W10453636 Espresso W10327840 Silver		W10453644 Espresso 9709588 Silver
3	Lower Gearcase W10307855 White W10527047 Nickel Pearl W10535254 Onyx Black W10524029 Empire Red W10567055 Dark Pewter/Slate	6	Column and Pins 9703673 White 9708763 Nickel Pearl 9705320 Onyx Black 9705324 Empire Red 9708725 Dark Pewter/Slate		
	W10609124 Espresso W10540257 Silver		W10453639 Espresso 9709585 Silver		


CASE, GEARING AND PLANETARY UNIT PARTS

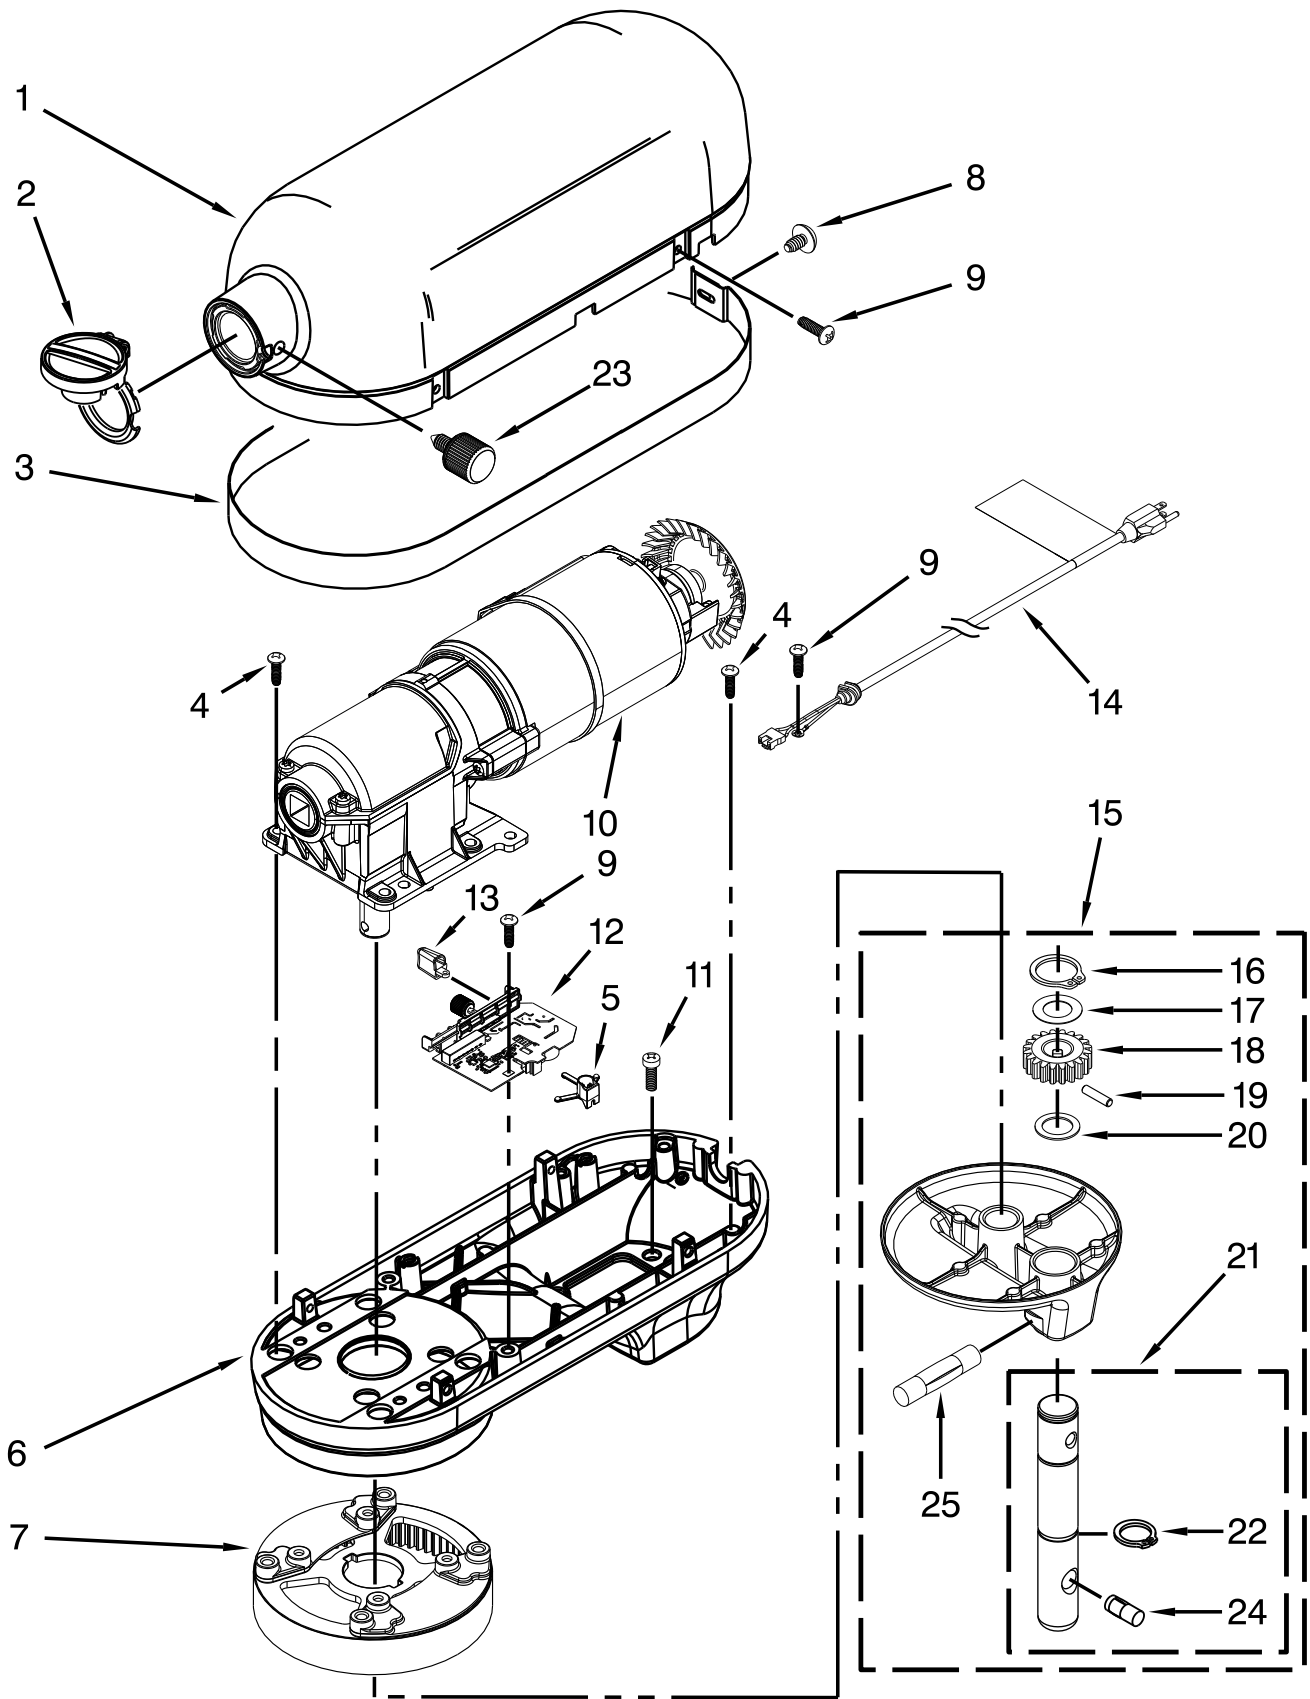

CASE, GEARING AND PLANETARY UNIT PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Motor Housing (Refer to Color Variation Parts Page)	8	3400617	Screw	16	9703438	Ring, Retaining
2	W10394928	Cap, Attachment Hub, Hinged	9	3400814	Screw	17	9706090	Washer
3		Trim Band (Refer to Color Variation Parts Page)	10	W10517938	Motor, 120 Volt Assembly	18	W10234643	Gear, Pinion
4	W10351843	Screw	11	3400200	Screw	19	9707223	Pin, Retaining
5	W10305968	Holder, Control	12	W10487697	Control Assembly, 120 Volt	20	8533910	Washer
6		Lower Gearcase (Refer to Color Variation Parts Page)	13	W10307854	Guard, Switch	21	9708191	Shaft, Agitator
7	W10234493	Gear, Ring and Plate Assembly	14		Cord, Power	22	9703680	Clip, Retaining
			15	W10308001	Orange Planetary Assembly (Refer to Color Variation Parts Page)	23		Thumb Screw
							W10360791	Black
						24	9704677	Pin, Groove
						25	W10234531	Pin, Groove

BASE AND PEDESTAL UNIT PARTS

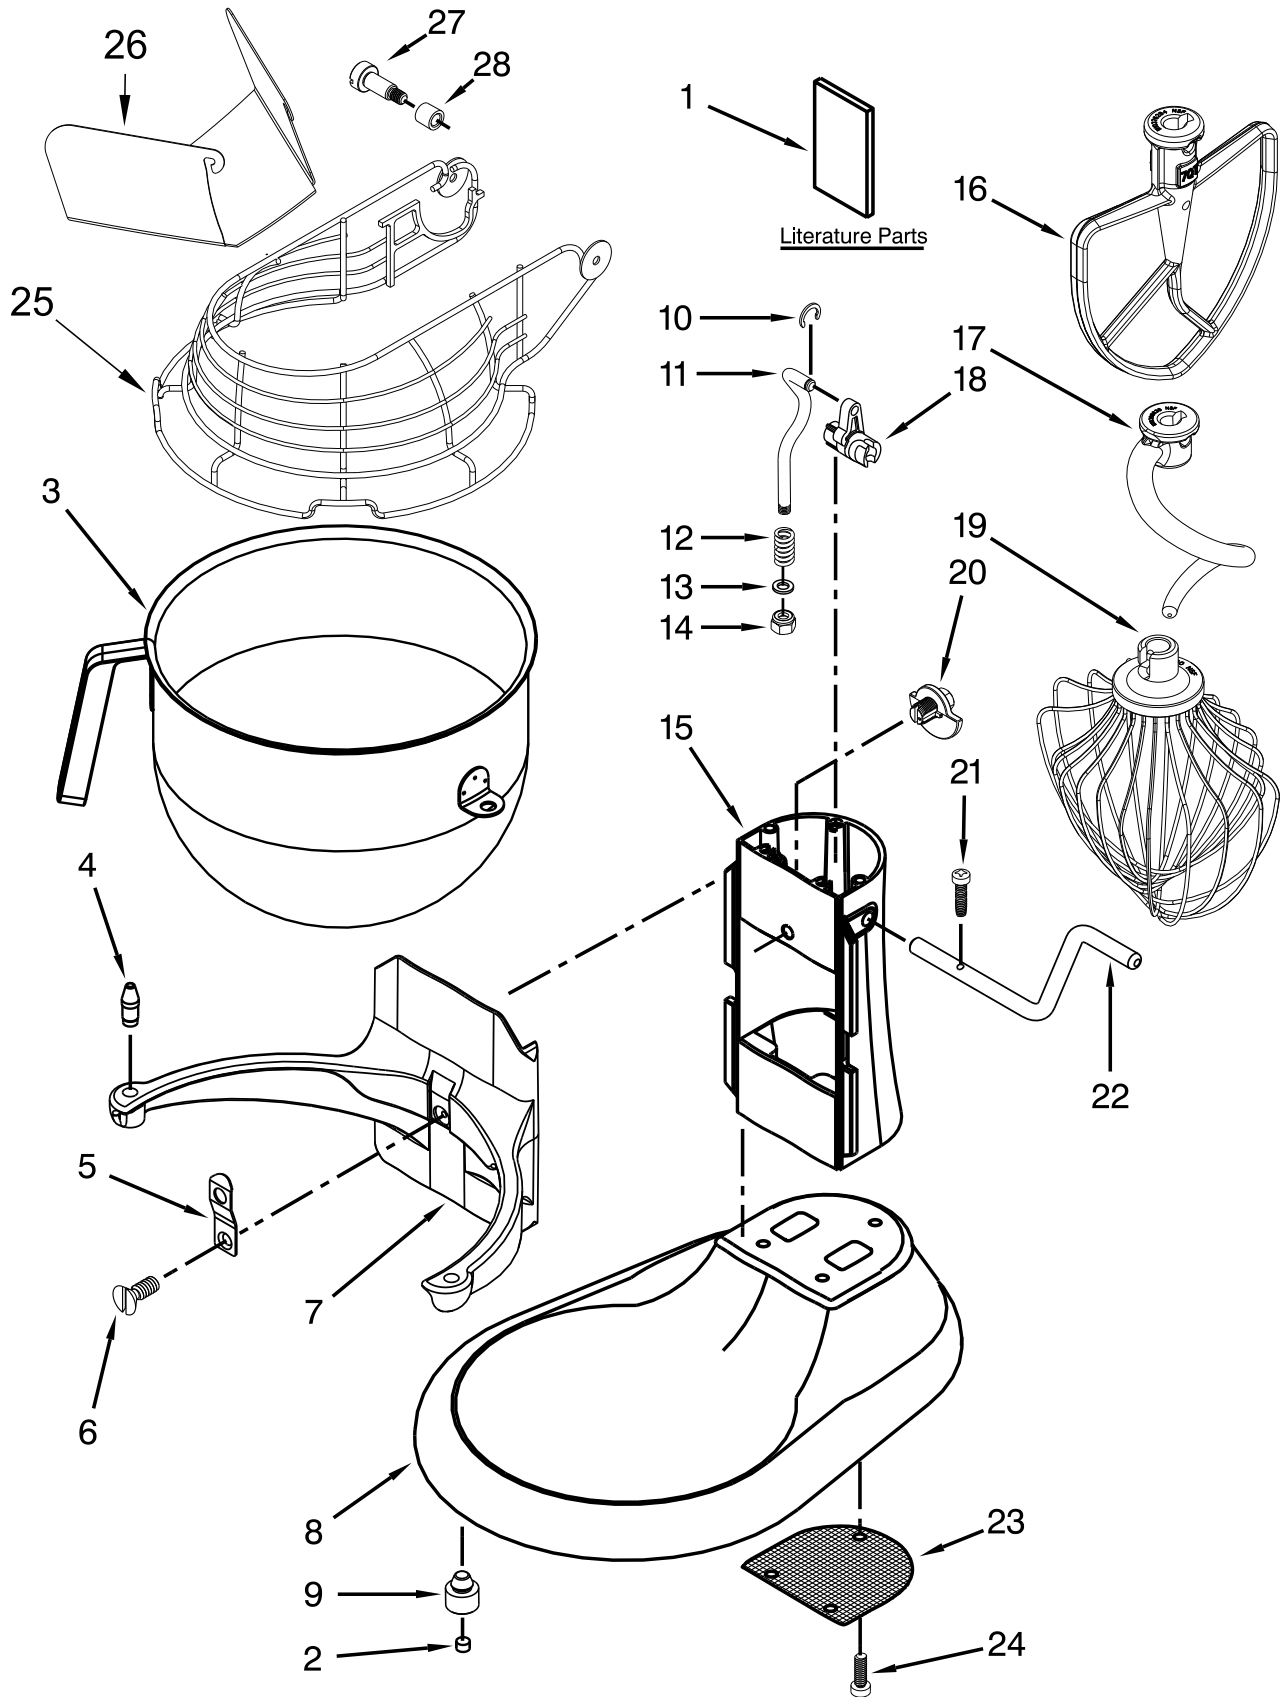

BASE AND PEDESTAL UNIT PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	9	9708649	Foot	20	9703426	Cam, Adjusting
	W10581080	Use and Care Guide	10	9703307	Ring, Retaining	21	3400863	Screw
2	W10439369	Plug, Foot	11	W10598835	Rod, Bowl Lift	22	W10598836	Handle, Bowl Lift
3	W10508588	Bowl, 8 Quart	12	9237	Spring, Lift Rod	23	9706814	Screen, Vent
4	240185	Pin, Retaining Bowl	13	9703439	Washer	24	3400200	Screw
5	W10504114	Clip, Bowl Retainer	14	8533907	Nut			
6	3400018	Screw	15		Column and Pins (Refer to Color Variation Parts Page)			
7		Bowl Support and Pins (Refer to Color Variation Parts Page)	16	W10376294	Beater, Flat (Stainless)			
8		Base and Foot Assembly (Refer to Color Variation Parts Page)	17	W10462785	Hook, Dough (Stainless)			
			18	9706885	Arm, Bowl Lift			
			19	W10600940	Whip, Wire			