

# Unit Information

WFG250, WPG250 1800 Watts - 120 volt  NEMA 5-15

WPG250B 2400 Watts - 208 volt  NEMA 6-20

WFG250C, WPG250C 1800 Watts - 120 volt  NEMA 5-20

Grill takes about 10 minutes to warm up.

The WPB250B will heat-up and recover 32% faster than the WPG250

14.5" x 11" Cooking Surface

Flat, Ribbed or Flat & Ribbed Cast Iron Plates



Panini Supremo® / Tostato Supremo®  
Large Italian-Style Panini Grills

Ribbed Top & Flat Bottom


**WDG250**  
**WDG250C** / Canada

Flat Top & Bottom

**WFG250**  
**WFG250C** / Canada


Ribbed Top & Bottom

**WPG250**  
**WPG250B** / 208 volt  
**WPG250C** / Canada

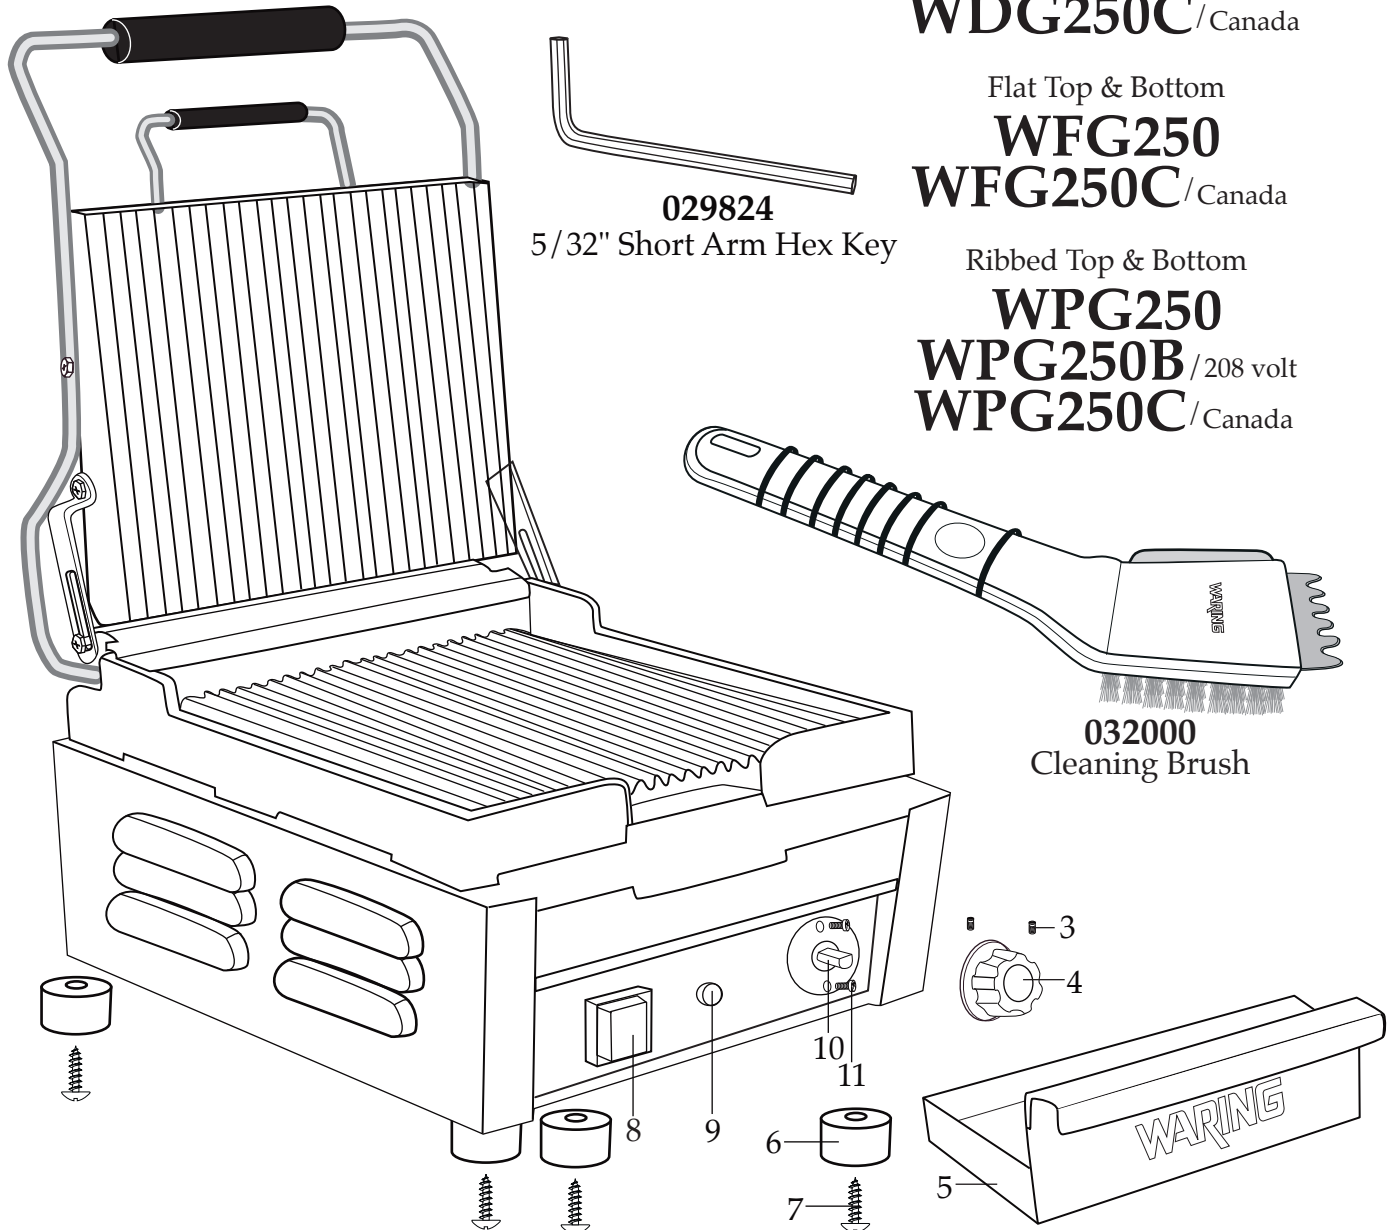

- 503184** WDG250 Base Unit Assembly
- 503185** WDG250C Base Unit Assembly
- 503133** WFG250 Base Unit Assembly
- 503304** WFG250C Base Unit Assembly
- 503134** WPG250 Base Unit Assembly
- 503245** WPG250B Base Unit Assembly
- 503305** WPG250C Base Unit Assembly

## Base Unit Components

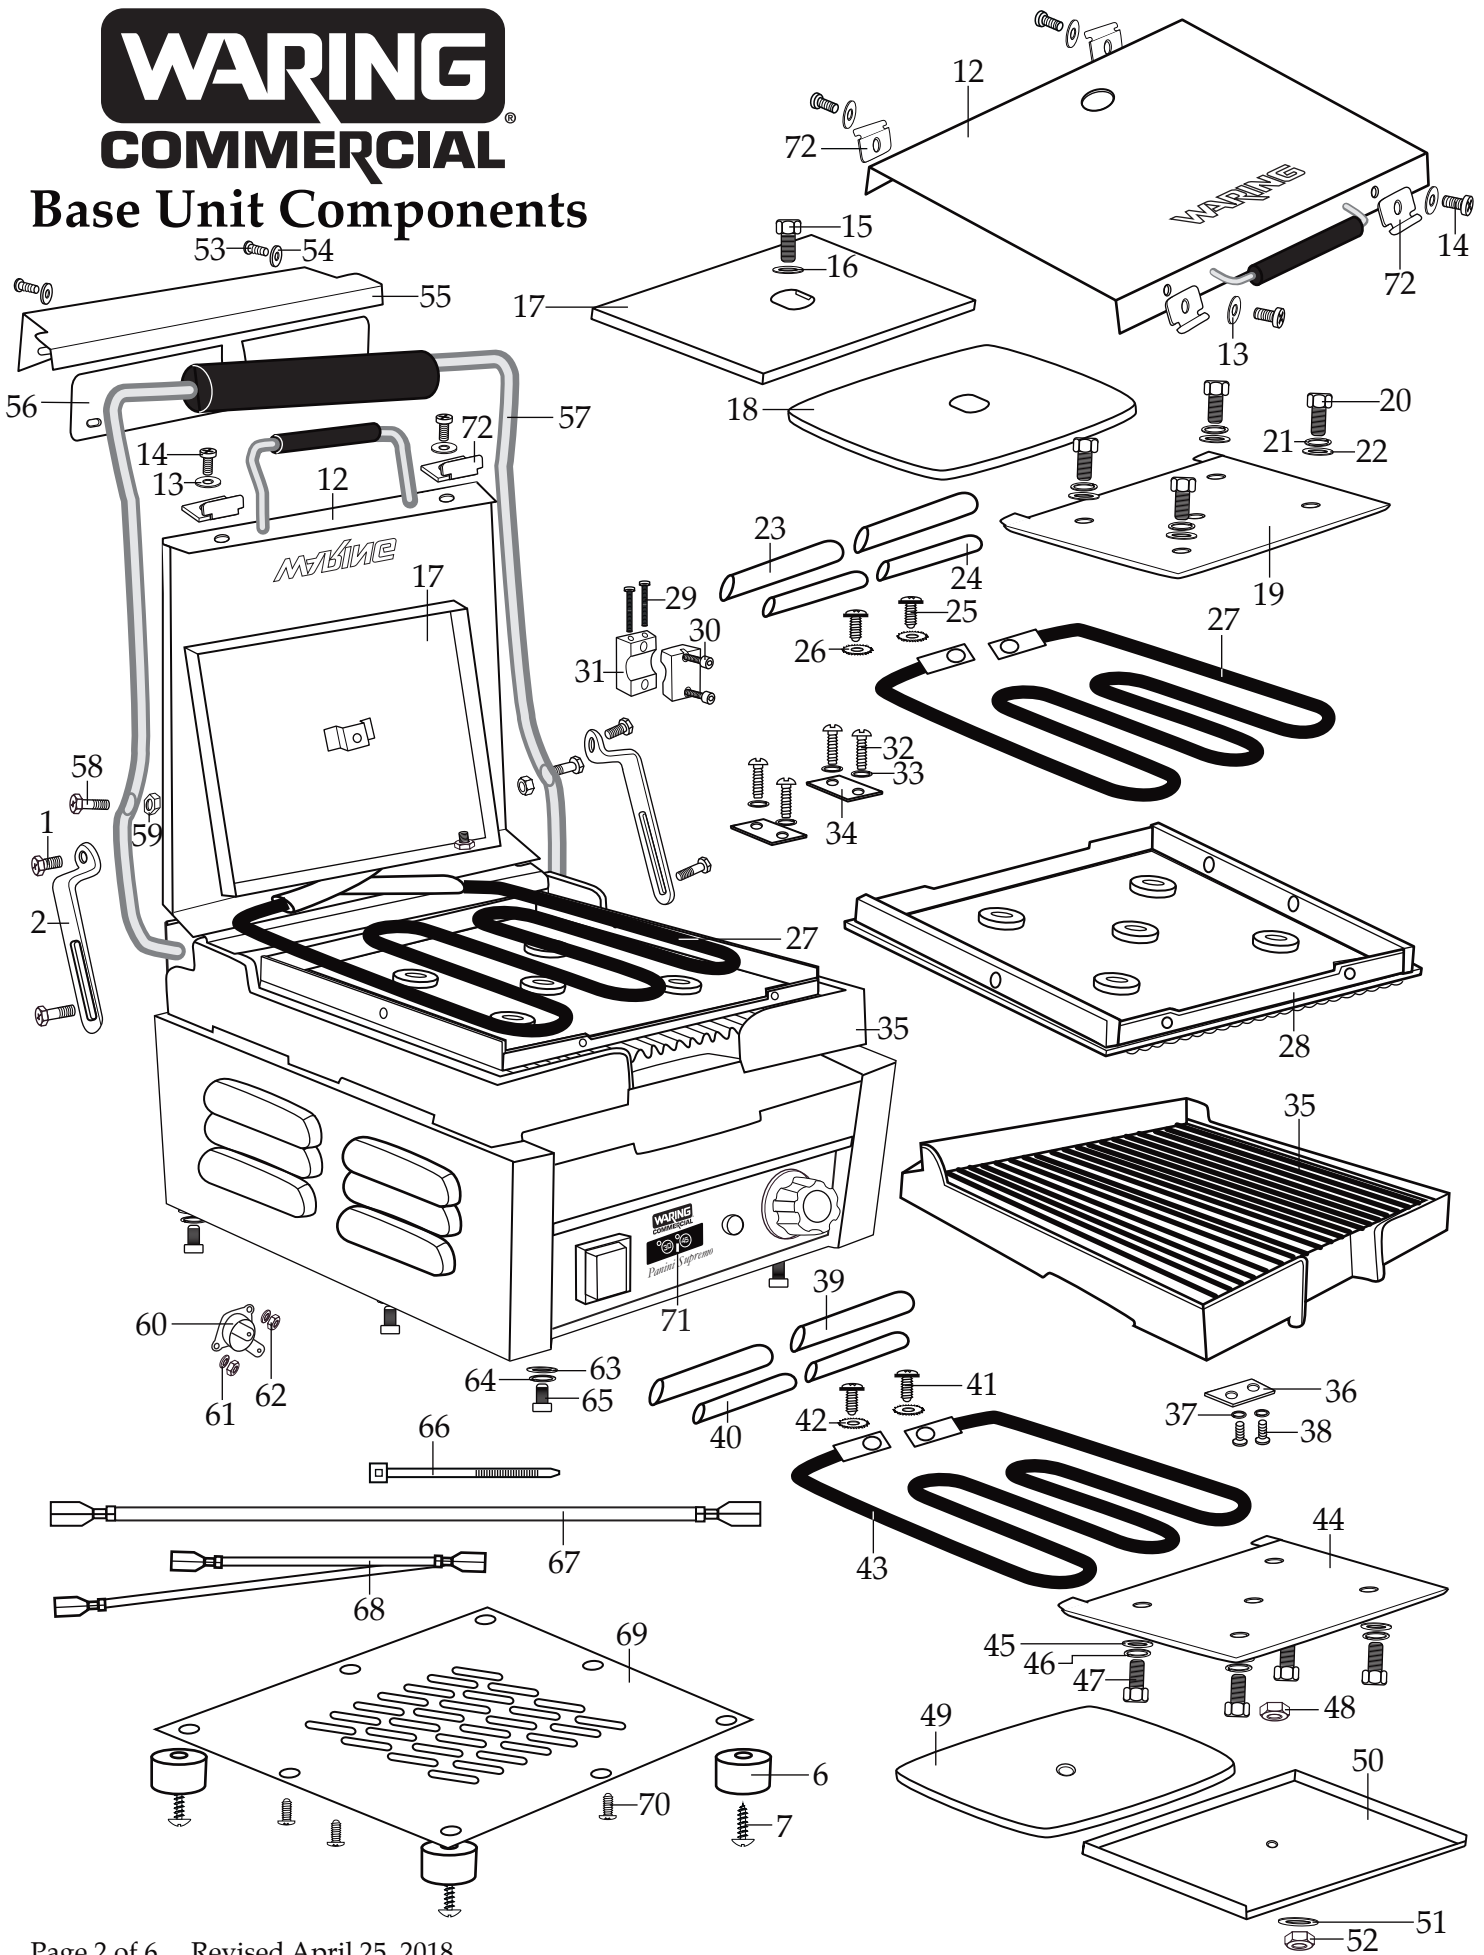

## Catalog/Model

WDG250  
WDG250C  
WFG250  
WFG250C  
WPG250  
WPG250B  
WPG250C



| Illustration # | Part #           | Description   |
|----------------|------------------|---|
| 1              | 028625           | Pivot Bracket Screw Set (1 large & 1 small 2 sets required) |
| 2              | 028624           | Pivot Bracket (2 required)                                  |
| 3              | 028627           | Set Screw (2 required)                                      |
| 4              | 028626           | Control Knob  |
| 5              | 029503           | Drip Tray   |
| 6              | 028622           | Foot (4 required)   |
| 7              | 028623           | Foot Screw (4 required)                                     |
| 8              | 029477<br>029478 | On-Off Switch<br>WPG250B On-Off Switch                      |
| 9              | 029941<br>030018 | Indicator Light<br>WPG250B Indicator Light                  |
| 10             | 029942<br>030013 | Thermostat<br>Thermostat for WPG250B                        |
| 11             | 029943           | Thermostat Screw (2 required)                               |
| 12             | 029945           | Cover   |
| 13             | 029946           | Washer (4 required)   |
| 14             | 035012           | Screw (4 required)  |
| 15             | 029950           | Hex Head Bolt   |
| 16             | 029951           | Washer  |
| 17             | 029953           | Top Insulation Plate  |
| 18             | 029949           | Top Insulation  |
| 19             | 029955           | Top Element Plate   |
| 20             | 029962           | Hex Head Bolt (4 required)                                  |
| 21             | 029963           | Spring Washer (4 required)                                  |
| 22             | 029964           | Washer (4 required)   |
| 23             | 029956           | Fiber Sleeve (2 required)                                   |
| 24             | 029957           | Plastic Sleeve (2 required)                                 |
| 25             | 029958           | Screw (2 required)  |
| 26             | 029959           | Washer (2 required)   |
| 27             | 029961<br>030020 | 6 Amps Top Element<br>WPG250B Top Element                   |

## Catalog/Model

WDG250  
WDG250C      WPG250  
                  WPG250B  
WFG250      WPG250C  
WFG250C



| Illustration # | Part #                               | Description  |
|----------------|--------------------------------------|--|
| 28             | 029967<br>029968                     | Ribbed Top Grill Plate<br>Flat Top Grill Plate   |
| 29             | 036549<br>030054                     | Screw (2 required <i>on units after 10/18/2017</i> )<br>Screw  |
| 30             | 036550<br>030055                     | Tension Bolts (2 required <i>on units after 10/18/2017</i> )<br>Tension Screw  |
| 31             | 036548<br>030056                     | 2 Piece Tension Bracket ( <i>on units after 10/18/2017</i> )<br>Tension Bracket  |
| 32             | 029992                               | Screw (4 required)   |
| 33             | 029993                               | Spring Washer (4 required)   |
| 34             | 029995                               | Large Handle Bracket (2 required)  |
| 35             | 036554<br>029971<br>036553<br>029972 | Ribbed Bottom Grill Plate ( <i>on units after 10/18/2017</i> )<br>Ribbed Bottom Grill Plate<br>Flat Bottom Grill Plate ( <i>on units after 10/18/2017</i> )<br>Flat Bottom Grill Plate |
| 36             | 029973                               | Thermostat Bracket   |
| 37             | 029974                               | Washer (2 required)  |
| 38             | 029975                               | Screw (2 required)   |
| 39             | 029956                               | Fiber Sleeve (2 required)  |
| 40             | 029957                               | Plastic Sleeve (2 required)  |
| 41             | 029958                               | Screw (2 required)   |
| 42             | 029959                               | Washer (2 required)  |
| 43             | 029977<br>030021                     | 8 Amps Bottom Element<br>WPG250B Bottom Element  |
| 44             | 029979                               | Bottom Element Plate   |
| 45             | 029964                               | Washer (4 required)  |
| 46             | 029963                               | Spring Washer (4 required)   |
| 47             | 029962                               | Hex Head Bolt (4 required)   |
| 48             | 029980                               | Nut  |
| 49             | 029982                               | Bottom Insulation  |
| 50             | 029984                               | Bottom Insulation Plate  |
| 51             | 029951                               | Washer   |
| 52             | 029980                               | Nut  |

## Catalog/Model

WDG250      WPG250  
 WDG250C    WPG250B  
 WFG250      WPG250C  
 WFG250C




| Illustration # | Part #           | Description   |
|----------------|------------------|---|
| 53             | 029985           | Screw (2 required)  |
| 54             | 029986           | Washer (2 required)   |
| 55             | 036551<br>030007 | Rear Cover with Tension Cover <i>(on units after 10/18/2017)</i><br>Rear Cover with Tension Cover           |
| 56             | 036552<br>030008 | Rear Cover Plate with Tension Hole <i>(on units after 10/18/2017)</i><br>Rear Cover Plate with Tension Hole |
| 57             | 036547<br>030009 | Large Handle <i>(on units after 10/18/2017)</i><br>Large Handle   |
| 58             | 029990           | Hex Head Screw (2 required)   |
| 59             | 029991           | Nut (2 required)  |
| 60             | 029996<br>030014 | Thermal Cut-off<br>WPG250B Thermal Cut-off  |
| 61             | 029997           | Washer (2 required)   |
| 62             | 029998           | Nut (2 required)  |
| 63             | 029999           | Washer (4 required)   |
| 64             | 030000           | Spring Washer (4 required)  |
| 65             | 030001           | Bolt (4 required)   |
| 66             | 013731           | Wire Tie (7 required)   |
| 67             | 030003           | 17" Red Lead  |
| 68             | 030004           | Joined Red & White Lead   |
| 69             | 030002           | Bottom Housing Plate  |
| 70             | 030006           | Screw (4 required)  |

**033681** - Cord 120 volt NEMA 5-15 

**033682** - Cord 208 Volt NEMA 6-20 

**033683** - Cord Canadian Unit NEMA 5-20 

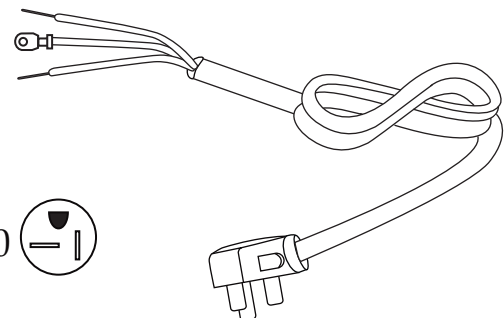


**\* Certified replacement of the cord set can only be performed by an Authorized Service Center or the Waring Factory Service Center.**

# Catalog/Model

WDG250    WPG250  
WDG250C    WPG250B  
WFG250    WPG250C  
WFG250C

**Waring Factory Service Center**  
314 Ella T. Grasso Ave.  
Torrington, CT 06790  
Tele. 1-800-269-6640  
Fax 860-496-9017  
www.waringcommercialproducts.com

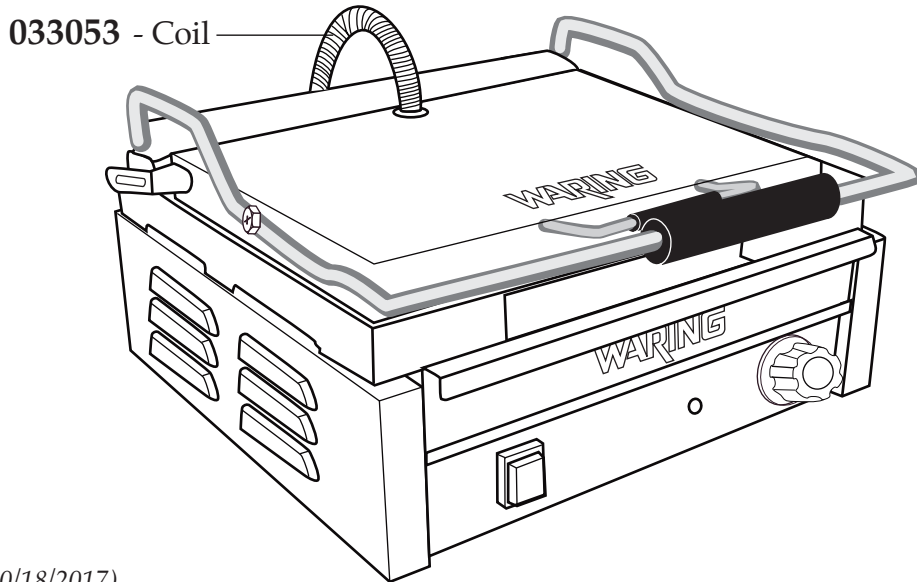

*(on units after 10/18/2017)*

